



New Main Control Valve (MCV)



1/4 turn Clockwise to shut
1/4 turn Counter-clockwise to open

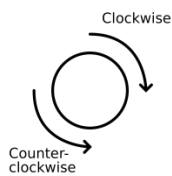

Water Key

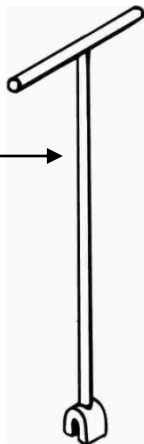

- Shine a flashlight down the curb box and make sure you know which direction the bar is and where it is positioned.
- You may have to use a shopvac to clean out the curb box to make it accessible
- Use the smallest water key you have. This valve does not require a big heavy-duty key.
- 1/4 turn clockwise to turn off the MCV.
- **DO NOT** turn hard on the new valve. It can break.
- The valve will turn very easy. If it does not, you are not on it properly or you are turning the wrong direction. Turning harder **will not** help.
- Do not leave a valve only part way on. Doing so will cause the valve to erode and it will stop working properly.
- Replacement of the valve will be at the property owner's expense, but the work must be done by Bountiful Irrigation District.
- The property owner is responsible to keep the curb box visible and cleaned out.